

FIG. 1

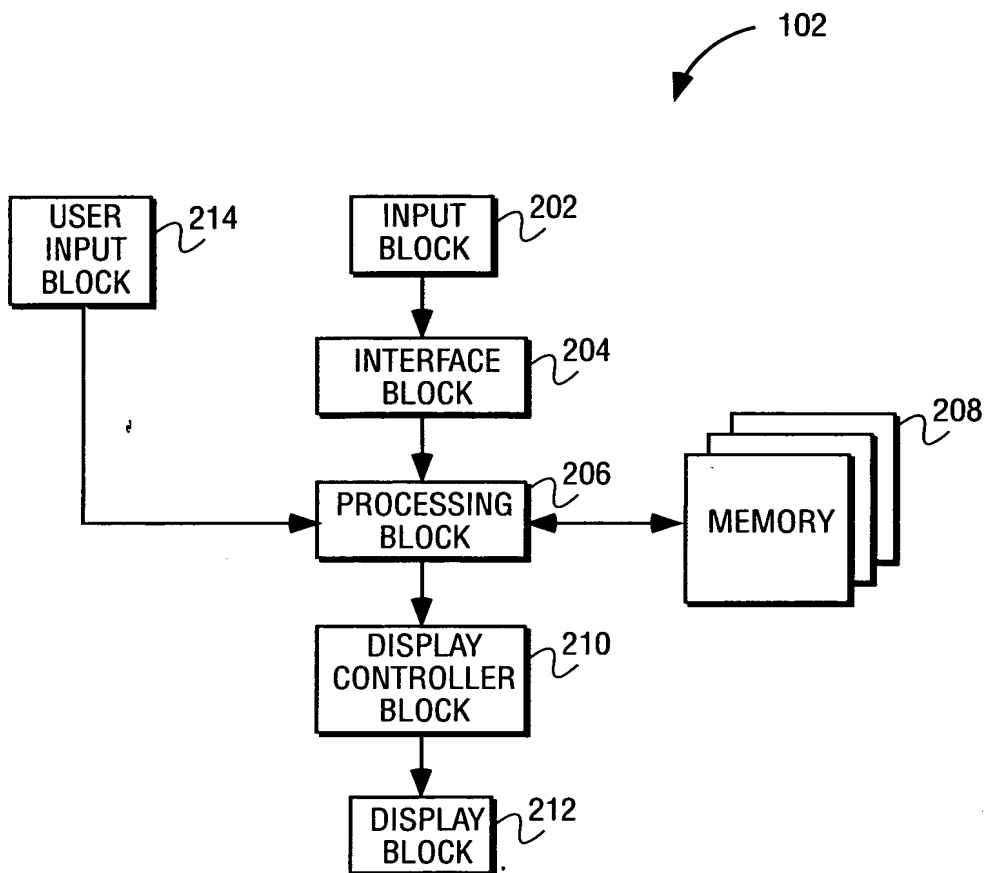


FIG. 2

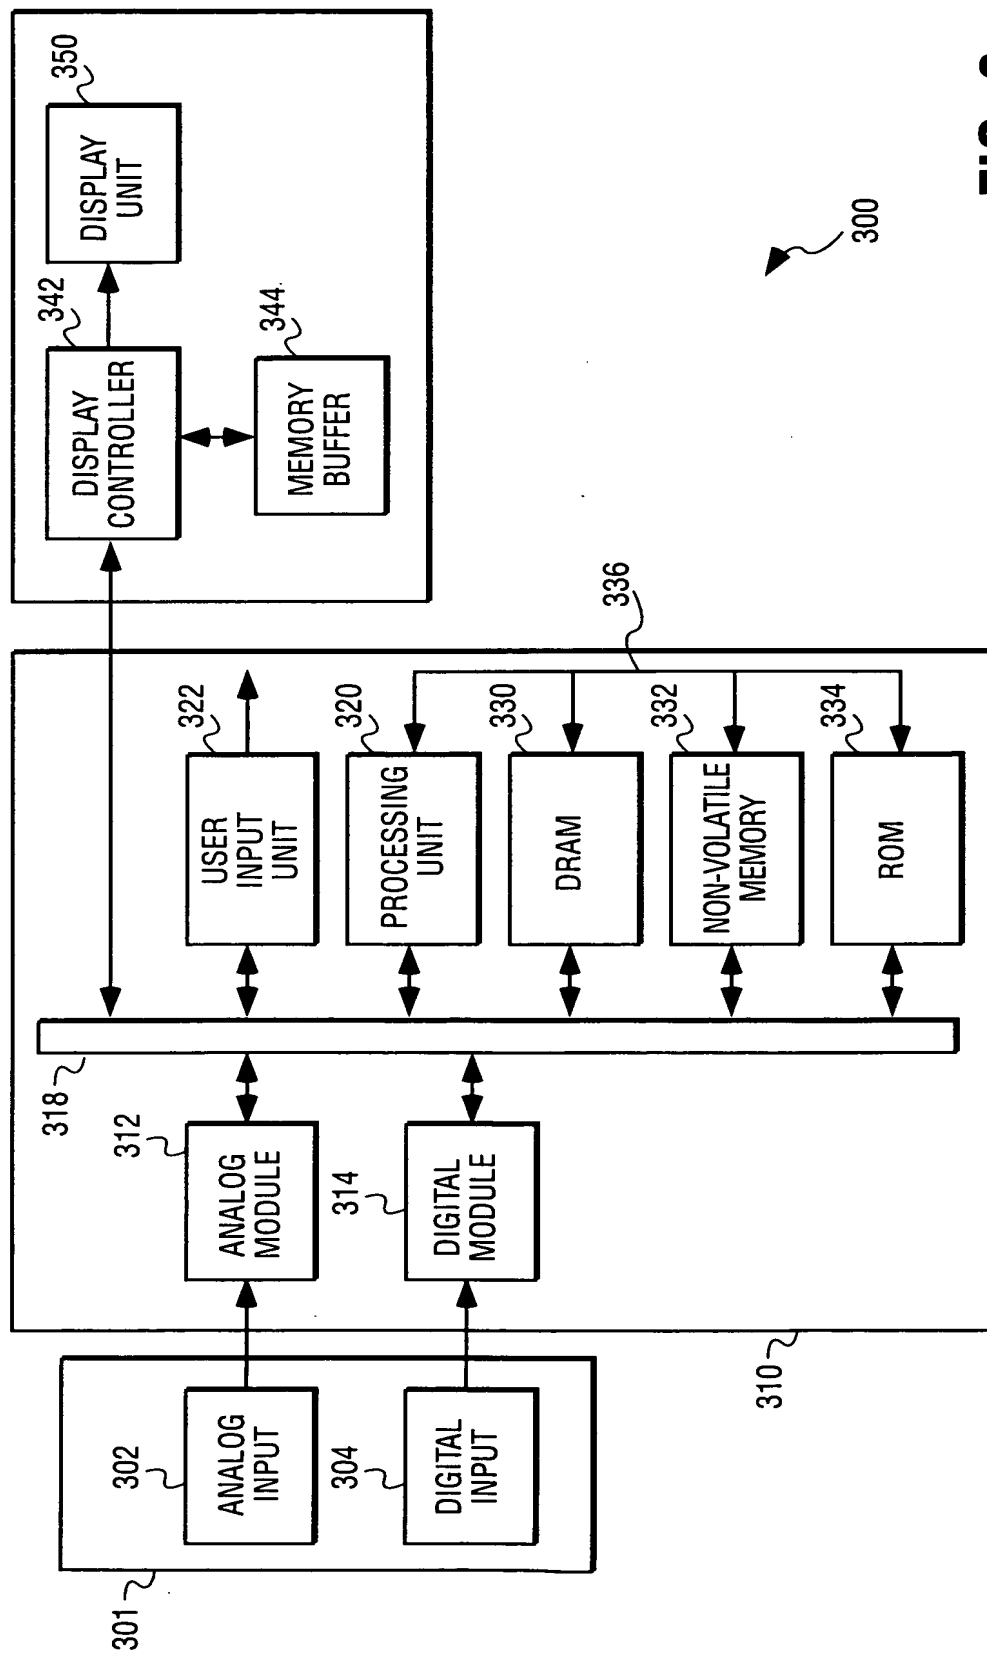


FIG. 3

400

DISPLAY

410

402

420

422

424

406

Diagram 400 illustrates a video player interface. It features a large rectangular area labeled "DISPLAY" (402) showing a video frame with four diagonal lines. Below the display is a control bar (410) containing three buttons: a fast rewind button (420) with four left-pointing chevrons, a pause button (422) with the word "PAUSE", and a fast forward button (424) with four right-pointing chevrons. Below the control bar is a progress bar (406) represented by a long horizontal rectangle.

FIG. 4

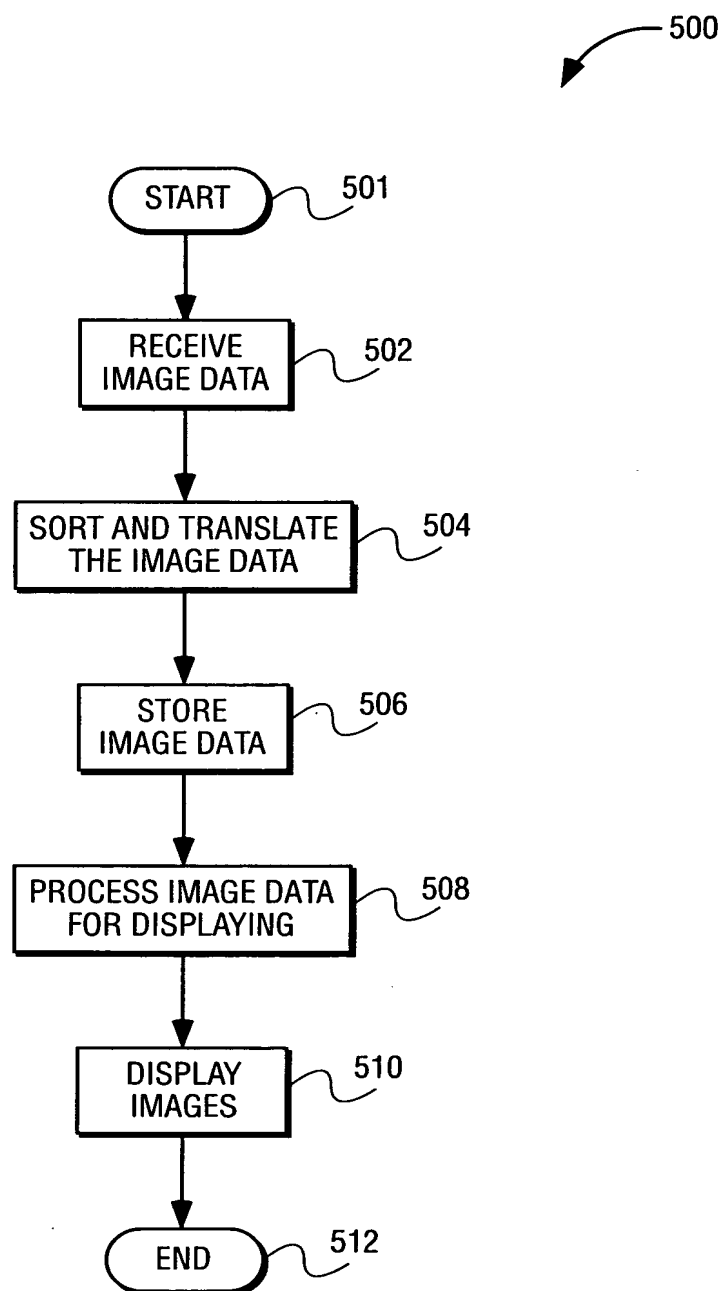
[illegible]

FIG. 5

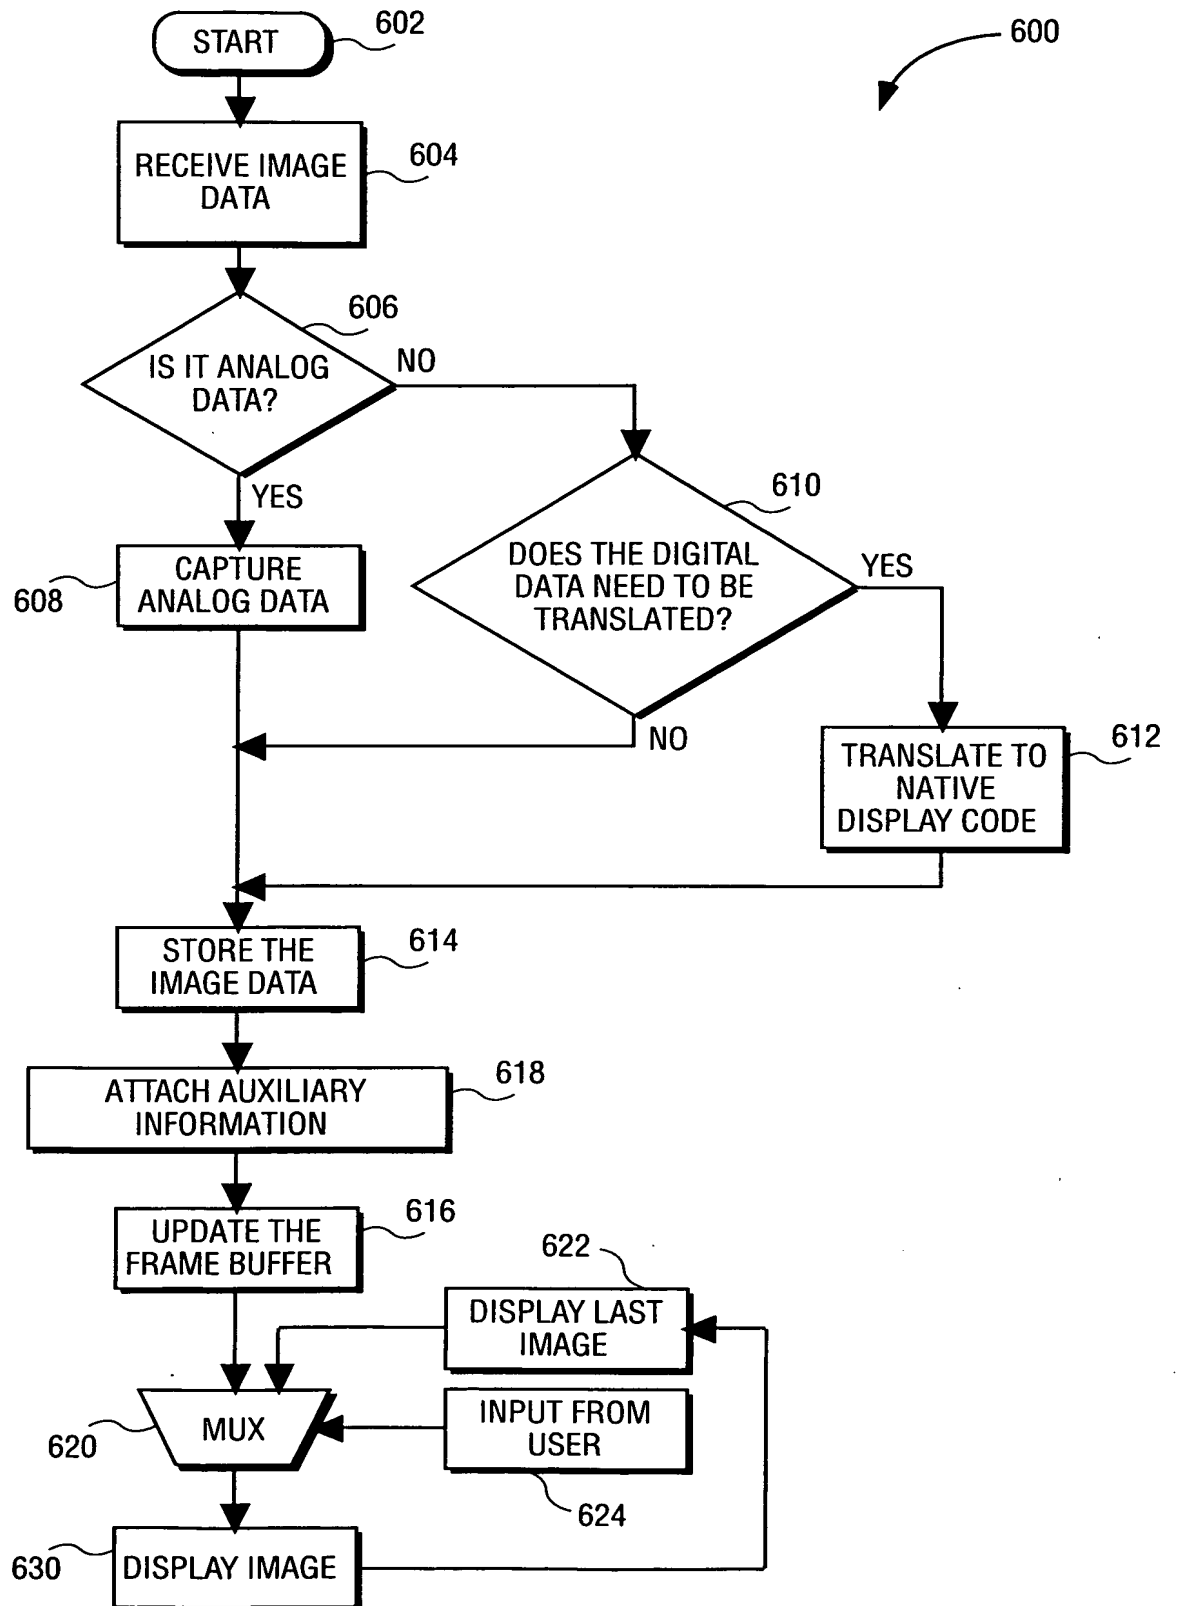


FIG. 6

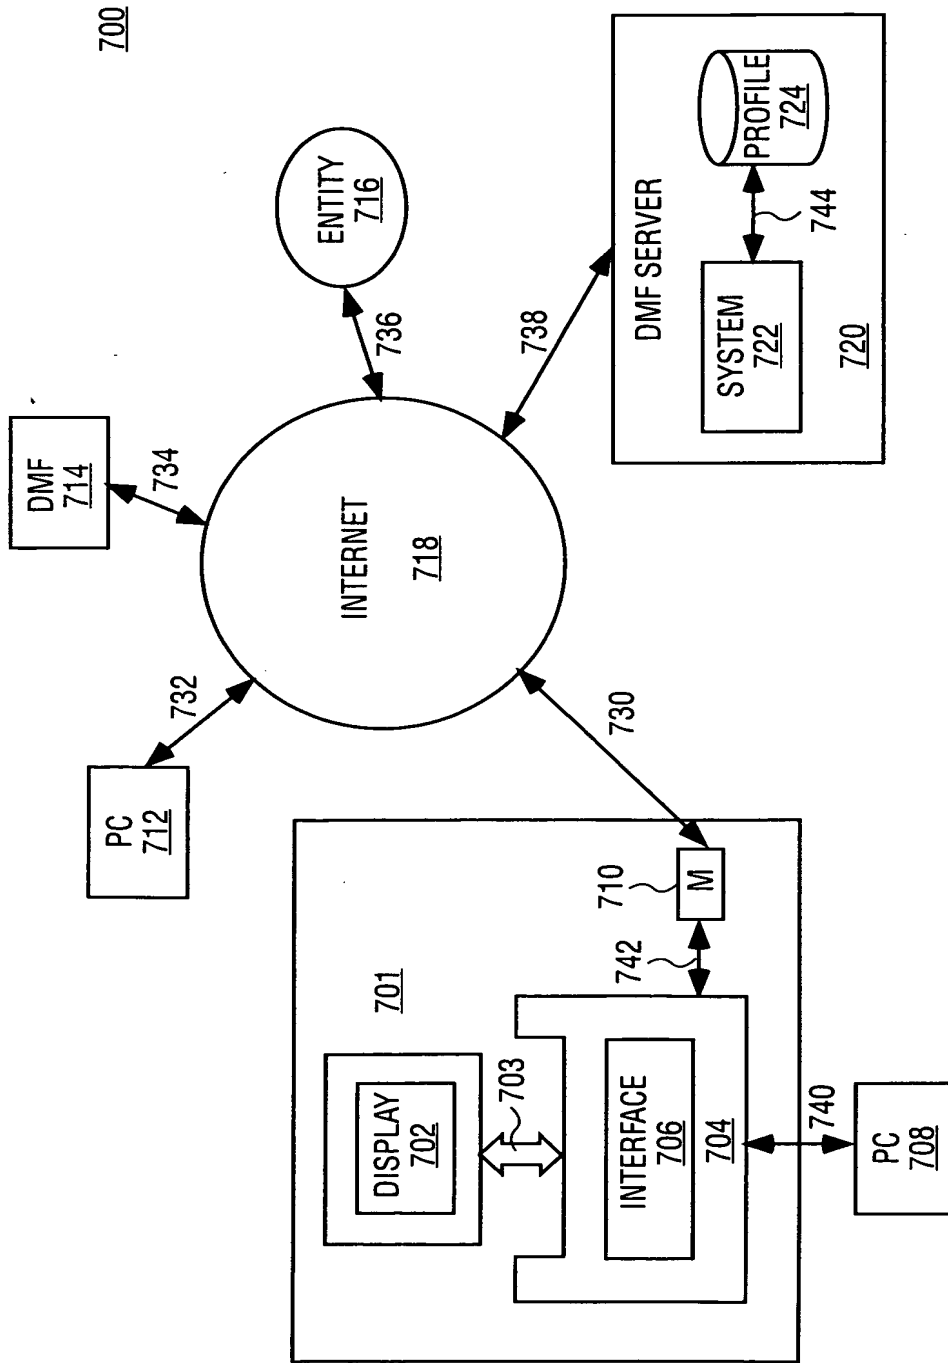


FIG. 7

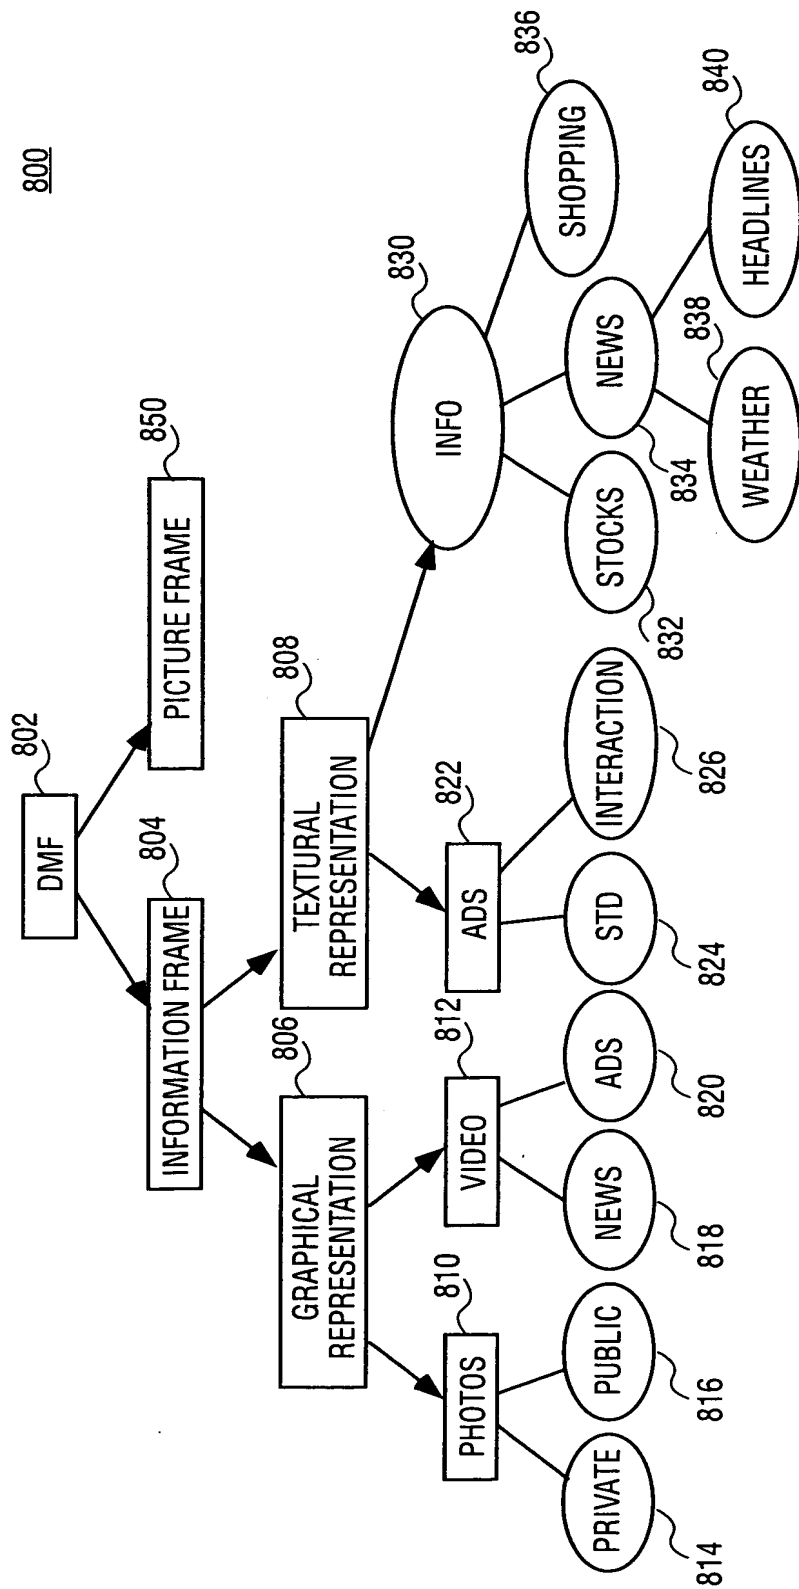


FIG. 8

START

900

SET SEQUENCE TO
DATA MODE
902

YES

IS PICTURE SIGNAL
ACTIVE?
904

NO

SET SEQUENCE TO
PICTURE MODE
906

DISPLAY SCREEN IN
RESPONSE TO THE
SEQUENCE
908

END

FIG. 9

FIG. 9: 0221000

FIG. 10

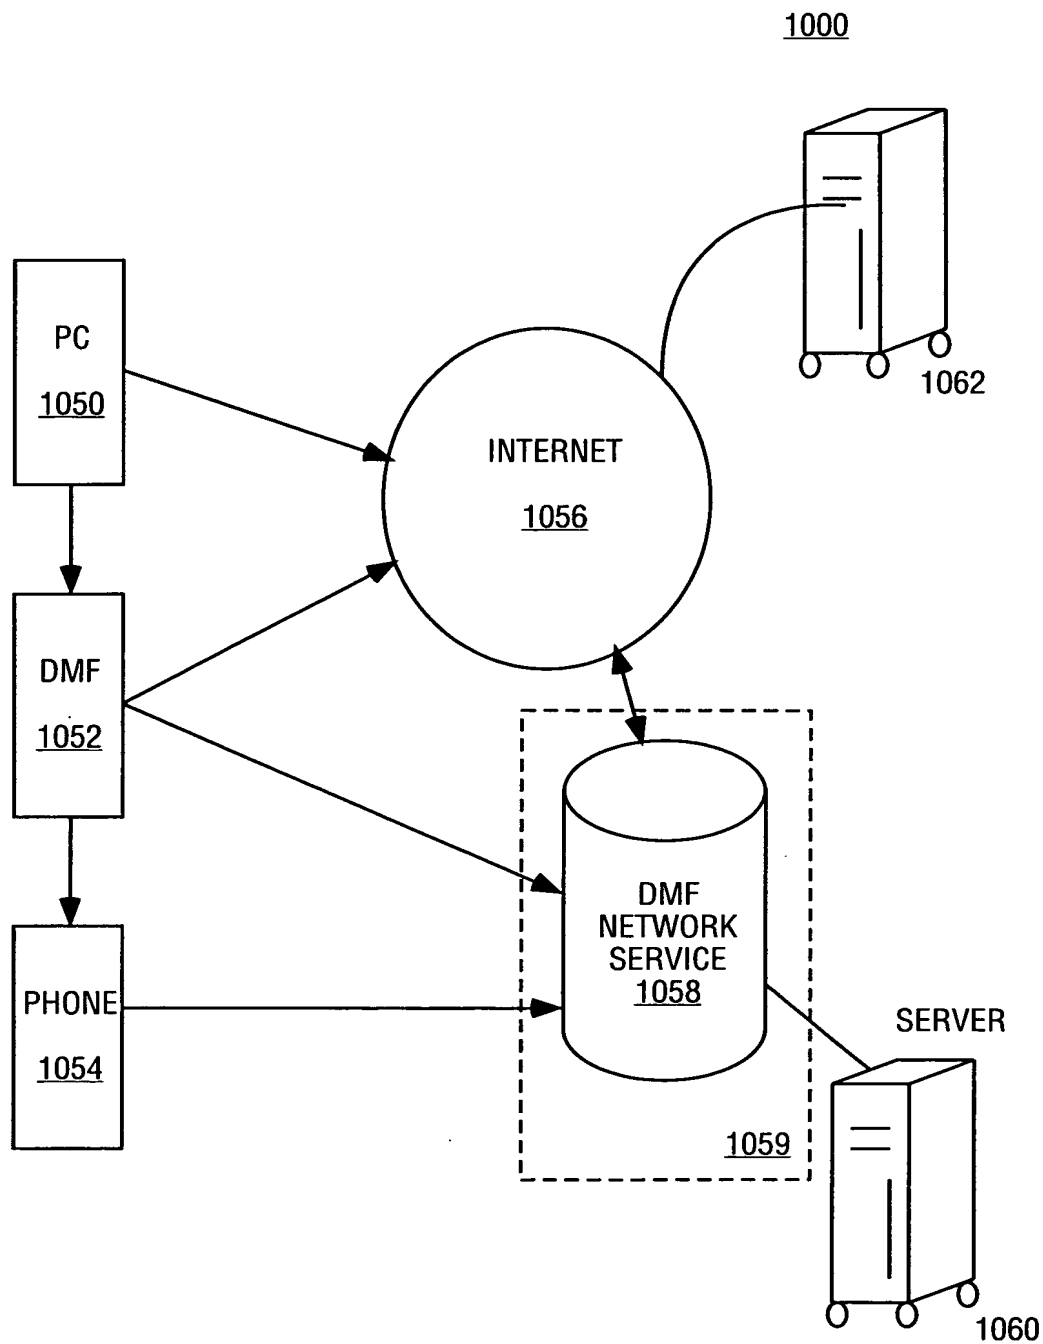


FIG. 10

1100

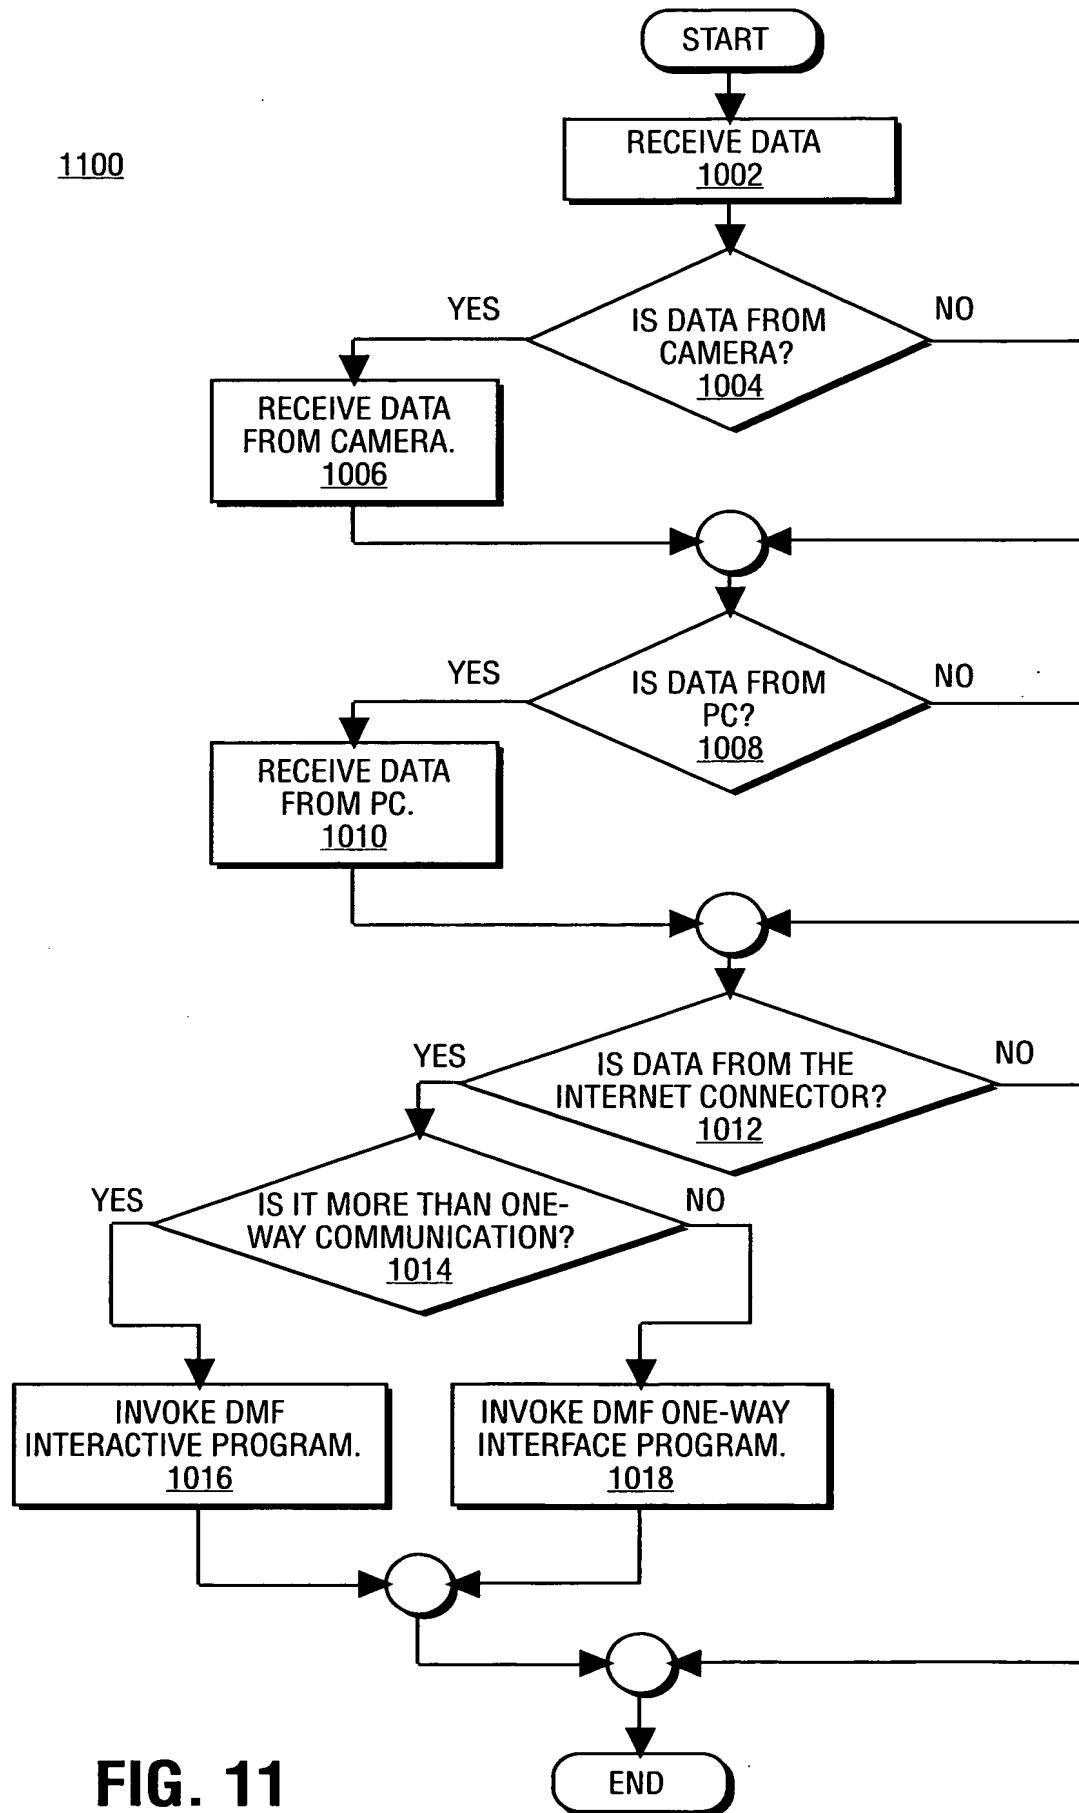


FIG. 11

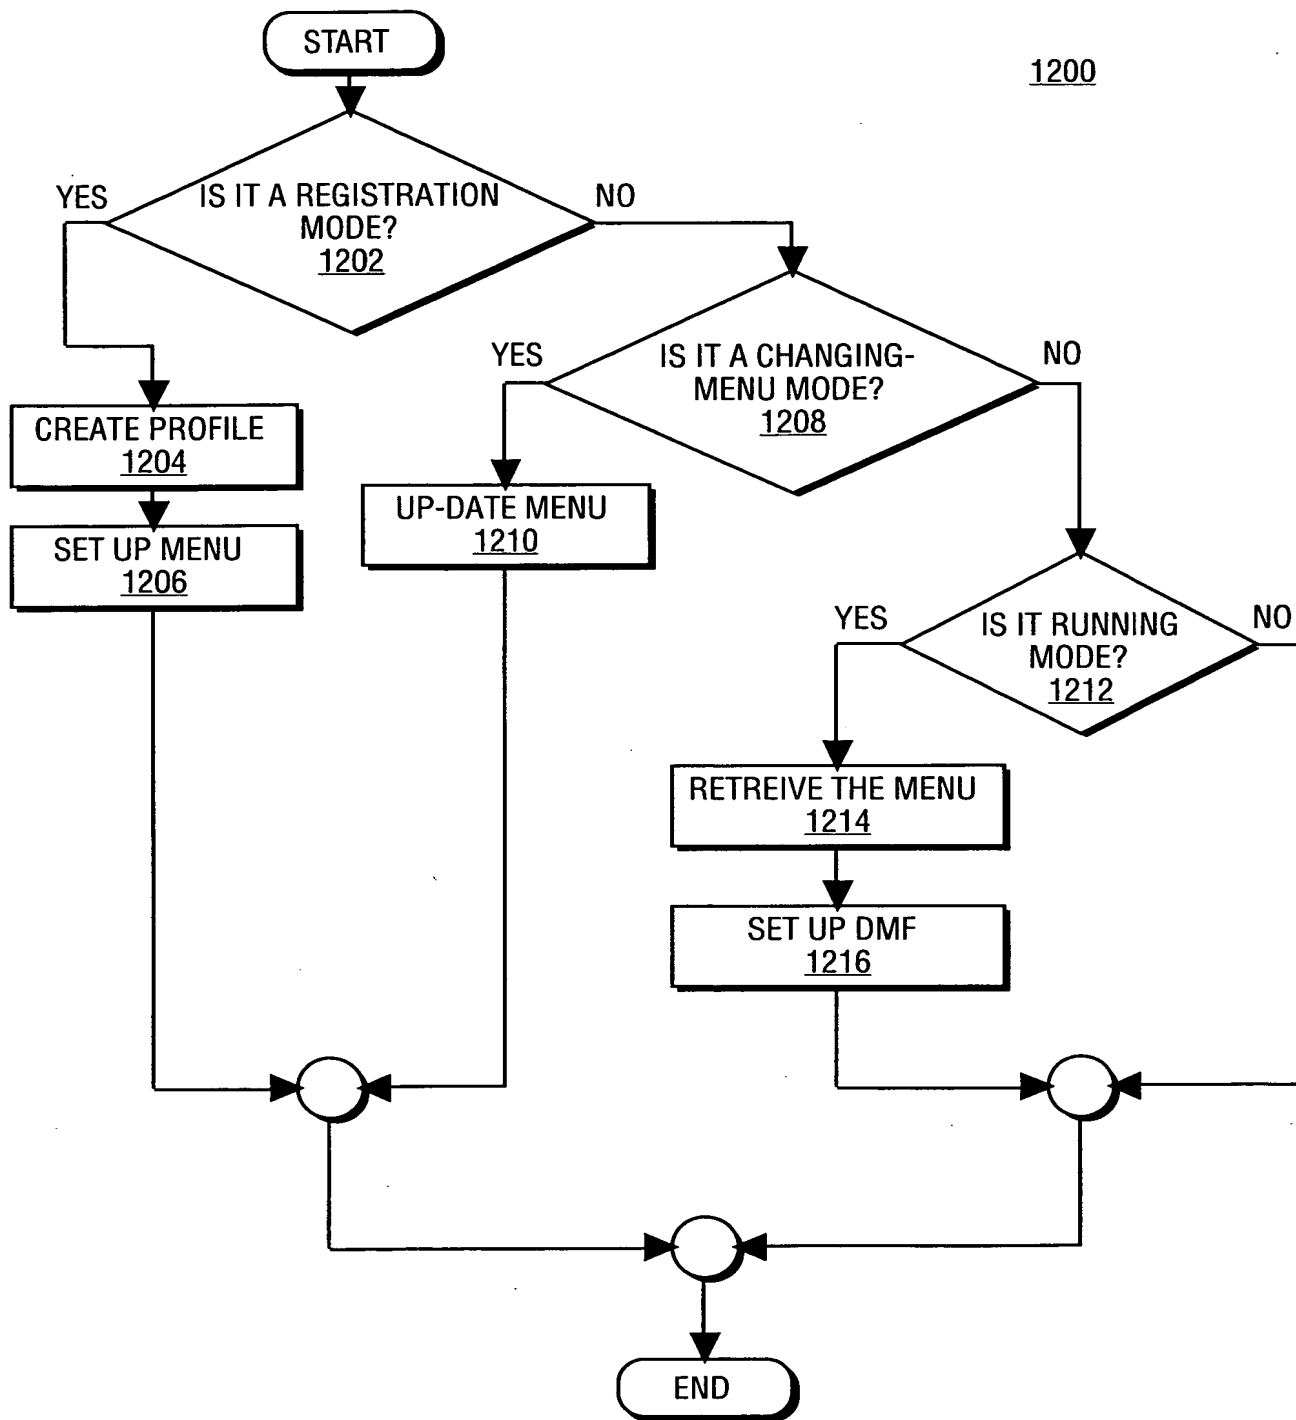


FIG. 12

1300

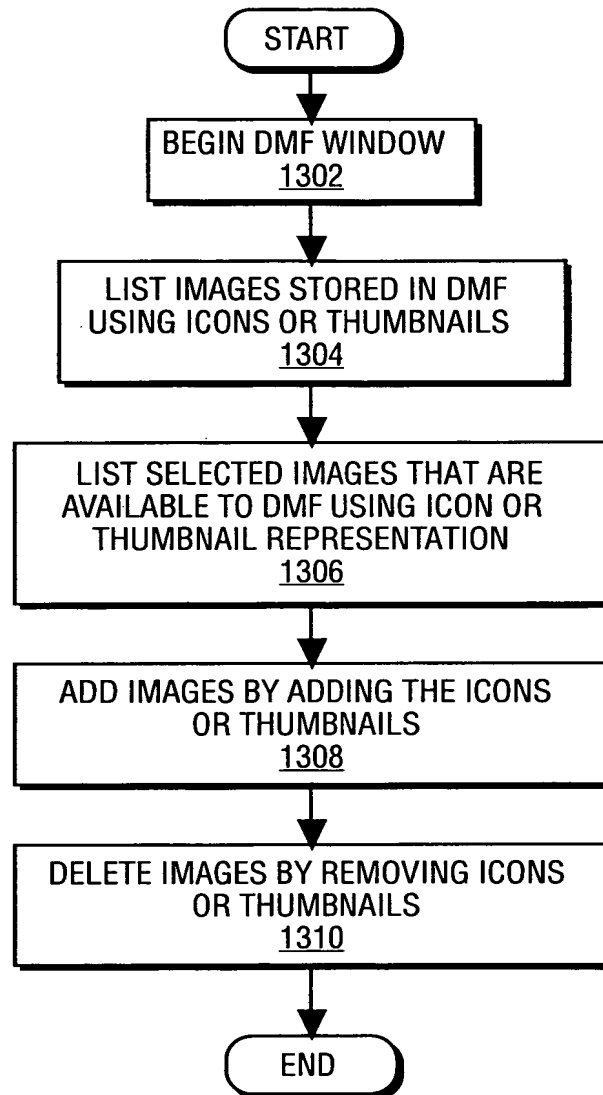


FIG. 13